

308-312
LODGE CAUSEWAY

S.M. GAUGE


Tel: +44 (0) 117 965 4615
Fax: +44 (0) 117 958 3660

BRISTOL
BS16 3RD

C O M P A N Y

Email: info@smgauge.co.uk
Web: www.smgauge.co.uk

COP700 / COP1400

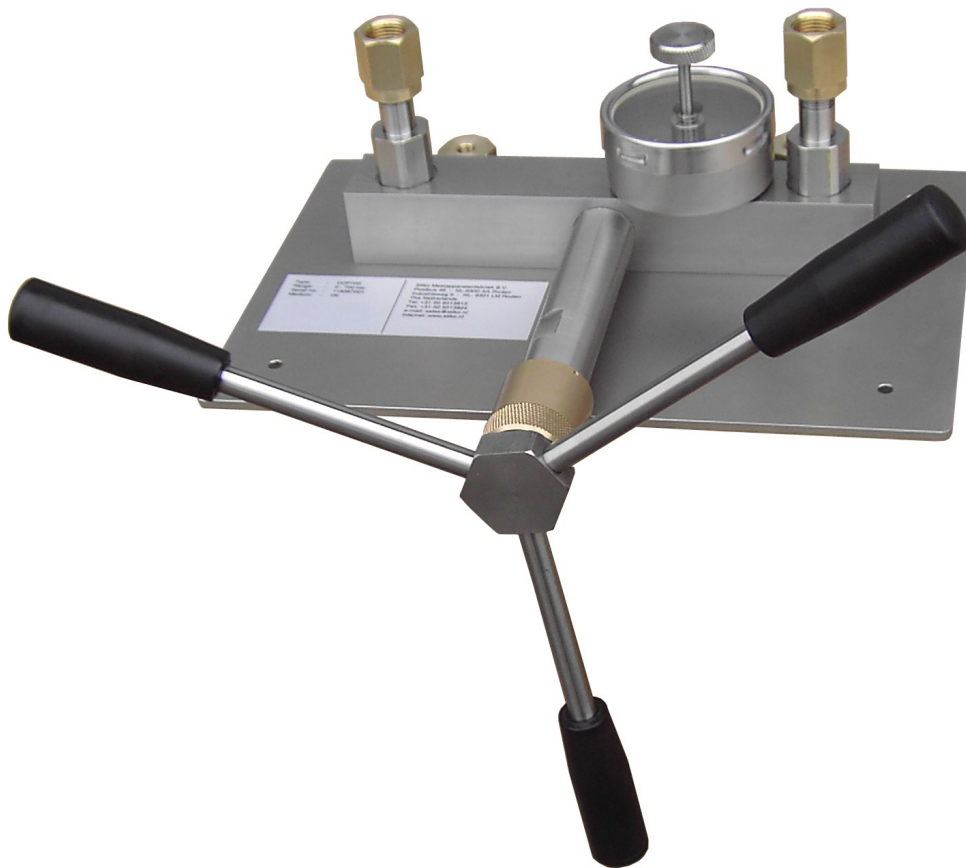

Operating manual for comparison test pump COP700 / COP1400

Table of Contents

1 introduction.....	1
1.1 general product description.....	1
1.2 schematics.....	1
1.3 specifications.....	2
2 instrument outline.....	2
3 installation.....	3
3.1 purging COP700/COP1400.....	3
4 operating COP700/COP1400.....	3
5 maintenance.....	4
5.1 changing the liquid.....	4
5.2 maintenance on sub assemblies.....	4



**S.M. Gauge Company Limited
308-312 Lodge Causeway
Fishponds
Bristol
UK
BS16 3RD**

**Tel.: +44 117 9654615
Fax: +44 117 9583660**

**E-mail: sales@pressuregauge.co.uk
Web: www.smgauge.co.uk**

**visit our specialist deadweight tester website :
www.deadweighttesters.co.uk**

1 introduction

1.1 general product description


The COP700/COP1400 comparison test pump is designed to test a pressure gauge/transmitter by comparing the instrument with a high accurate pressure standard.

The pressure standard (test pressure gauge or high accurate pressure transmitter) should be occasionally calibrated by a dead weight tester. The tester is of a simple robust construction.

The device is built around the following main components:

- screw pump 700 or 1400 bar
- valve
- liquid reservoir
- 2 pressure connections


1.2 schematics

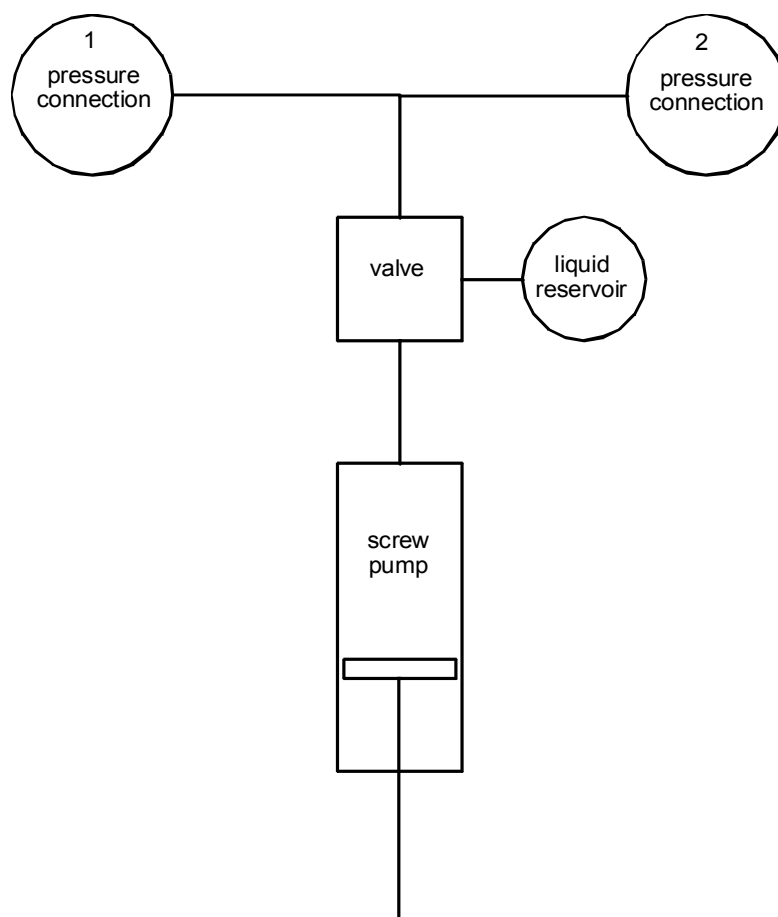

1.3 specifications

type	COP700	COP1400
maximum pressure	700 bar	1400 bar
footprint	340 mm (W) x 225 mm (D)	340 mm (W) x 225 mm (D)
height	130 mm	130 mm
pressure connections	3/8" bsp left handed male	3/8" bsp left handed male
female bsp adapters	1/2"; 3/8"; 1/4"; 1/8"; brass	1/2"; 3/8"; 1/4"; 1/8" stainless steel
medium	Esso Nuto H32	Esso Nuto H32
piston displacement	24 cm ³	24 cm ³

2 instrument outline

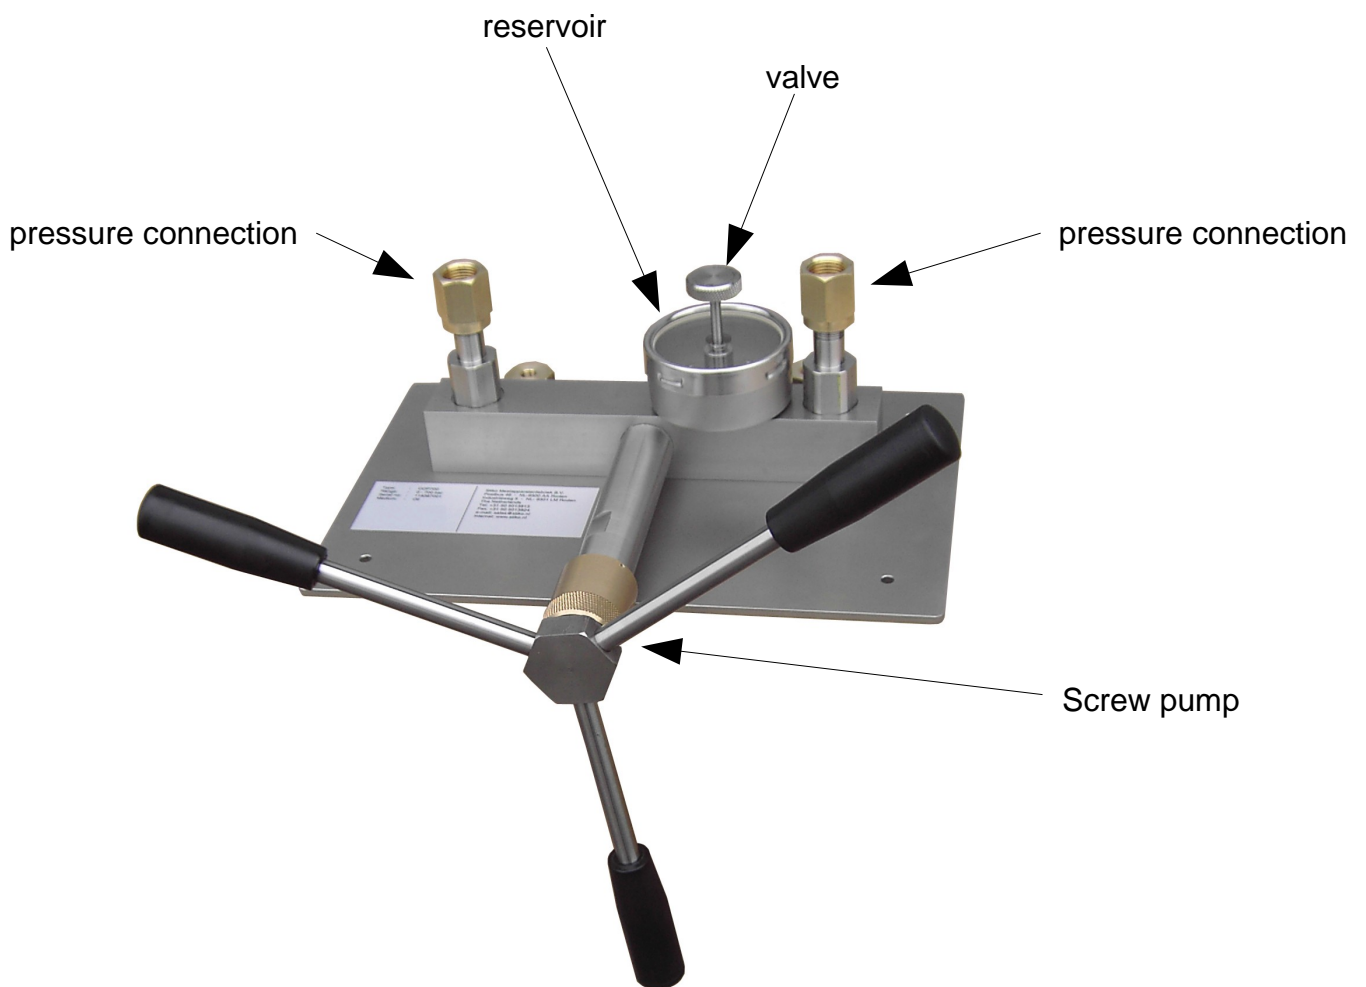

3 installation

The COP700/COP1400 is designed to be fastened on a firm table with bolts.

3.1 filling up COP700/COP1400

Before connecting any external device it is good practice to purge the COP700/COP1400 first.

1. make sure there is sufficient oil (Nuto H32) in the reservoir
2. open the valve (clockwise, till its mechanical stop)
3. rotate the screw pump clockwise until it hits its end stop
4. block the pressure connections with a plug or by a finger
5. rotate the screw pump anti clockwise until it hits its end stop (the pump is filled with oil)
6. close the valve (anti clockwise, max 2 turns)
7. unplug the pressure connections
8. carefully operate the screw pump until the liquid level is at the sealing of the pressure connections
9. mount the two pressure instruments
10. carefully operate the screw pump (clockwise) up to maximum 10 bar
11. carefully open the valve, the pressure will be reduced and air will be pressed out
12. repeat step 10 and 11 until no air bubbles escape when the valve is opened
13. the comparison test pump is ready for use

4 operating COP700/COP1400

Make sure the comparison test pump is purged with oil as described in chapter 3.1.

1. open the valve (clockwise, till its mechanical stop)
2. rotate the screw pump anti clockwise until it hits its end stop
3. close the valve (anti clockwise, max 2 turns)
4. rotate the screw pump clockwise until the desired pressure has been reached
5. do not try to open the valve if the pressure exceeds 10 bar
6. to lower the pressure rotate the screw pump anticlockwise
7. disconnect the pressure instrument(s)

5 maintenance

The COP700/1400 is made of low maintenance parts, most of the maintenance will be caused by contamination due to external sources.

5.1 changing the liquid

Dependent on the frequency of use it is good practice to change hydraulic oil every 1 to 5 years.

1. open the valve
2. rotate the screw pump clockwise until it hits its end stop
3. take out the liquid
4. blow through the pressure connections 1 and 2
5. clean the reservoir
6. see chapter 3.1 purging

5.2 maintenance on sub assemblies

If maintenance on sub assemblies like the valves or the screw pump is required, please contact the manufacturer as servicing of these parts are normally performed by the manufacturer.

6 part list

Part	Code	Qty.	Remark
Base plate	340 x 225 mm	1	
Oil hand pump		1	16 mm piston
U-cup	Merkel T20 8-16-5.7 1	1	In piston of oil pump
Back-up ring	PTFE	1	in piston of oil pump for U-cup
Oil reservoir and valve		1	
O-ring in valve	Ø5.23x2.62 mm 90° shore	1	
O-ring	Ø22 x 2,5 mm 90° shore NBR	1	for mounting oil reservoir
O-ring	Ø15,88 x 2,62 mm 90° shore NBR	1	for mounting hand pump
O-ring	Ø18,6 x 2,4 mm 90° shore NBR	2	for mounting pressure connections
Adapter 1/2" bsp	027-411-26	2	
Adapter 3/8" bsp	027-411-14	1	
Adapter 1/4" bsp	027-411-25	1	
Adapter 1/8" bsp	027-411-15	1	
Multi seal	065-260-09	2	Ø13,2 x 6,9 x 1,3 mm, for adapters
Hydraulic oil	Nuto H 32	0.5 ltr.	Esso